

Philips TAZ2500/10 CD player Black Portable CD player

Gamintojas: PHILIPS · Modelis: TAZ2500/10 · EAN: 4895229174528 · Prekės kodas: 674025



135,90 €

Kaina su PVM

Be PVM: 112,31 €

Sandėlyje



Prekė internetu

Nuskenaukite kodą arba apsilankykite www.shopro.lt

Pagrindinės savybės

- ✓ Portable CD player
- ✓ CD-R playback CD-RW playback
- ✓ Built-in speaker(s) 3 W
- ✓ Digital tuner DAB+, DAB, FM
- ✓ Bluetooth Headphone connectivity
- ✓ Power source type: AC, Battery
- ✓ Black



Techninė specifikacija

Specifications

Sandėlio grupė

Entertainment Electronics > Multimedia [+192][-84]

Loudspeakers

Built-in speaker(s)	Yes
Number of built-in speakers	2
RMS rated power	3 W
Loudspeaker diameter	6.4 cm

Radio	
Digital tuner	Yes
Supported radio bands	DAB+, DAB, FM
Antenna type	External
Media types	
CD-R playback	Yes
CD-RW playback	Yes
Features	
Device type	Portable CD player
Product colour	Black
Preset stations quantity	20
Cassette deck	Yes
Cassette deck technology	Mechanical
Playback modes	Next, Shuffle, Repeat, Play, Pause, Fast forward, Fast reverse, Program, Previous
Housing material	Plastic
Display	
Built-in display	Yes
Display type	LCD
Backlight display	Yes
Backlight colour	White
Management features	
Bass adjustment	Yes
Volume control	Buttons
Sleep timer	Yes
Ports & interfaces	
Bluetooth	Yes
Headphone connectivity	3.5 mm
Bluetooth profiles	A2DP, AVRCP
Bluetooth version	6
Power	
Power source type	AC, Battery
Number of batteries supported	6
Power consumption (standby)	0.8 W
AC adapter input voltage	100 - 240 V

AC adapter frequency	50/60 Hz
----------------------	----------

Weight & dimensions

Depth	245 mm
-------	--------

Height	125 mm
--------	--------

Width	285 mm
-------	--------

Packaging data

Package width	370 mm
---------------	--------

Package depth	159 mm
---------------	--------

Package height	278 mm
----------------	--------

Package weight	2.2 kg
----------------	--------

Battery

Battery type	LR14
--------------	------

Battery voltage	1.5 V
-----------------	-------

Technical details

USB direct modes	Fast forward, Fast Backward, Play/Pause, Stop, Repeat, Previous/Next, Shuffle, Program Play, Fast reverse
------------------	---